## Si e gjejme versionin e bios-it?

- 1- Versioni I biosit shfaqet gjate boot-imit
- 2- Duke hyre ne bios setup utility(F2)
- 3- Duke perdorur dxdiag.
- 4- Kontrolli ne faqen zyrtare per te pare nese ka nje version me te ri se ai icili eshte instaluar

BIOS SETUP UTILITY			
Hain Advanced	11/U Monitor Boot Security	Exit	
System Overview		Use IENTERI . ITABI	
System Time System Date BIOS Version Processor Type Processor Spred Cache Size Nicrocode Update	E14:24:141 (Wed 12/14/2005) P4165FE BLOS P1.20 Genutice Intel (R) CPU 2.80GHz 23000Hz 1024KB 0F31/00	select a field. Use [+] or [-] to coofigure system Time.	
DINN 1 DINN 2 DINN 3 DINN 4	Dual-Channel Menory Node 256HB/166MHz (DDR333) None 256HB/166MHz (DDR333) None	<ul> <li>↔ Select Screen</li> <li>t4 Select Iten</li> <li>↔ Change Field</li> <li>Tab Select Field</li> <li>F1 General Help</li> <li>F3 Load Defaults</li> <li>F10 Save and Exit</li> <li>ESC Exit</li> </ul>	
v02.54 CO Copyright 1985-2003. American Regatrends. Inc.			

nHEBIOS(C)2003 American Hegatrends, Inc. P4:65PE BIOS P1-20 CPU : Genaime Intel(R) CPU 2.80GHz Speed : 2.80 GHz

Press F2 to run Setup Press F11 for Boot Menu Dual-Channel Memory Mode Initializing USB Controllers .. Done. S12MB OK Auto-Detecting Pri Master..IDE Hard Disk Auto-Detecting Sec Master..

## Aplikacioni I Update-imit te Bios-it per P4i65G.

AFUWIN.EXE, UCORESYS.SYS, UCOREVXD and UCOREW64.SYS:Keto jane utilitetet e Flash Memory Writer te cilat mundesojne update-imin e Bios-it ne chip-in ROM ne modelin madherbordit specific .Bios-I I update-uar gjendet Brenda AFUWIN.EXE. Per te percaktuar versionin aktual te Bios-t te madherbordit tuaj Shtypni <F2> gjate boot-imit dhe lexoni versionin e Bios-it.Sa me te medhenj te jene numrat aq me I ri eshte version I Bios-it.Ky utilitet funksionon ne Windows<sup>®</sup> 98, Windows<sup>®</sup> XP , Windows<sup>®</sup> XP 64-bit dhe perfshihet ne paketen e BIOS-it.

Ky utilitet nuk mund te perdoret per te gjithe tipet e madherbordeve Asrock.Gjithashtu madherbordet Asrock duhet te perdorin Asrock Flash Utiliy sepse utilitetet e pacertifikuara mund te shkaktojne demtime te pariparueshme te madherbordit

Procedura e update-imit te Bios-it

- 2- Download paketen e Bios-it(WinZip format me ekstensionin .zip) dhe mbyllni te gjitha programet.
- 3- Unzip dhe Save te gjithe fajllat ne te njejten direktori per te patur akses nga sistemi dhe do te shihni AFUWIN.EXE, UCORESYS.SYS, UCOREVXD and UCOREW64.SYS.
- 4- Kliko AFUwin .exe.



5- Shfaqet nje ikone dialoguese per te mbyllur te gjitha programet e tjera.Kliko "OK".

😂 afuwin	_ 🗆 🛛
File Edit View Favorites Tools Help	11
🔇 Back - 🐑 - 🎓 🔎 Search 😰 Folders 🛄 -	
Address D:\Documents and Settings\tetset\Desktop\afuwin	💙 🛃 Go
File and Folder Tasks       AFUWIN         Rename this file       UCORESYS         Copy this file       UCORESYS         Publish this file to the Web       Fundition the file         E-mail this file       To ensure that no other program interferes with the E         E-mail this file       To ensure that no other program interferes with the E         Move this file       OK	IOS update process, efore continue.
Other Places 8 KB	

6- Pasi keni perfunduar upgrade-imin e Bios-it do te shfaqet nje ikone dialoguese per t'ju kujtuar se duhet te ristartoni sistemin.Klikoni "Yes".

🗃 afuwin	
File Edit View Favorites	Tools Help
G Back · O · 👌	nuwn v4.11
Address D: Documents a File and Folder Tasks Rename this file Move this file Copy this file Publish this file to the Web E-mail this file Delete this file	Progress BIOS Map(Each Block is 4K) Legend Read Read Fram System must restart to have the changes take effect. Do you want to restart now? Yes No
Other Places	Stage Done. Address: FFFFFFFh
Desktop     My Documents     Shared Documents	Open Flash Save Exit

7- Pasi sistemi ristartohet, shtyp <F2> per te hyre ne bios setup utility gjate boot-imit. Nga menuja Exit zgjidhni "Load defaultSettings" dhe me pas shtypni <Enter> per te vazhduar

- 8- Selektoni "Exit Saving Changes" dhe shtypni <Enter> per te dale nga Bios-i.
- 9- Tashme sistemi do te boot-ohet me Bios-in e ri



Ne qofte se shfaqen probleme gjate update-imit te BIOS-it,mos e mbyllni sistemin sepse biosi I korruptuar mund te beje qe sistemi te mos boot-ohet.Perseritni procesin dhe nese problemi do te shfaqet perseri kthehuni perseri te versioni origjinal I bios-it.Ne qofte se Flash Memory Writer nuk eshte ne gjendje te update-oje fajllin e plote te bios-it,sistemi juaj nuk do te jete ne gjendje te bootohet.Ne qofte se ndodh nje gje e tille,sistemi juaj ka nevoje per servis.